



Ax02




15x90

Bx36




10x45

Cx04



7.0x70

Dx08




1/4x90

Ex08



1/4

Fx01



Gx04



15x50

Hx72



3,5x35

Ix14




4x16

Nx06




4x40

Jx11




7x50

Kx02



77mm

Lx02



Mx02






Px02



08mm


Tools Required




Recycle





1st
Step:

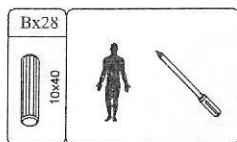



4/5 4/5 3/3A

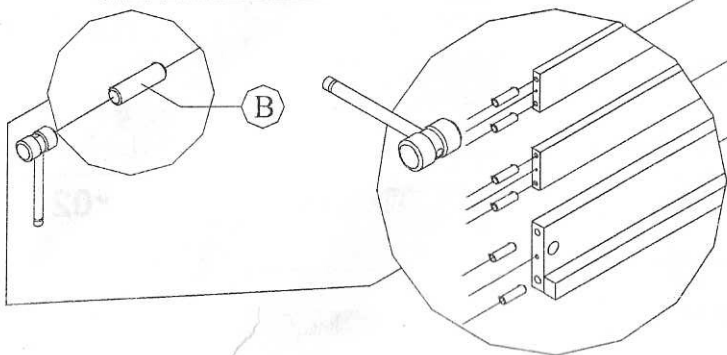



2nd
Step:

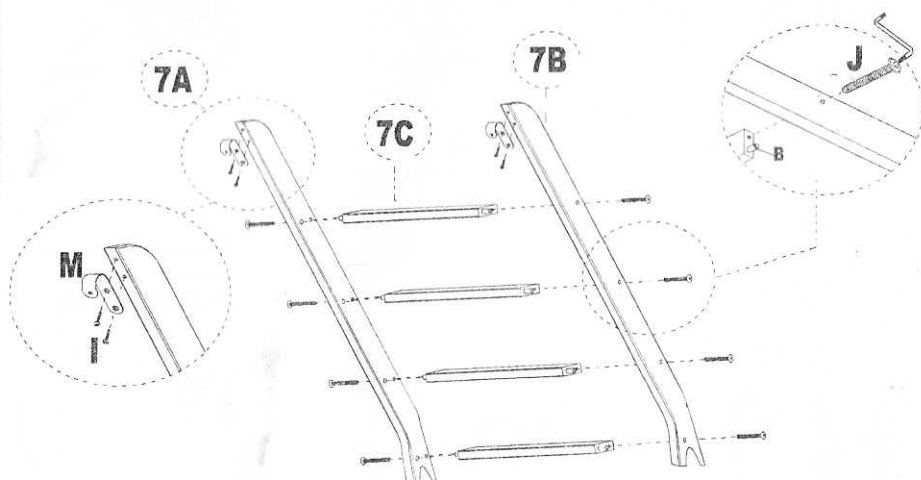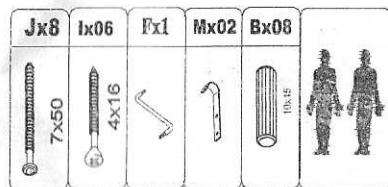



3rd
Step:

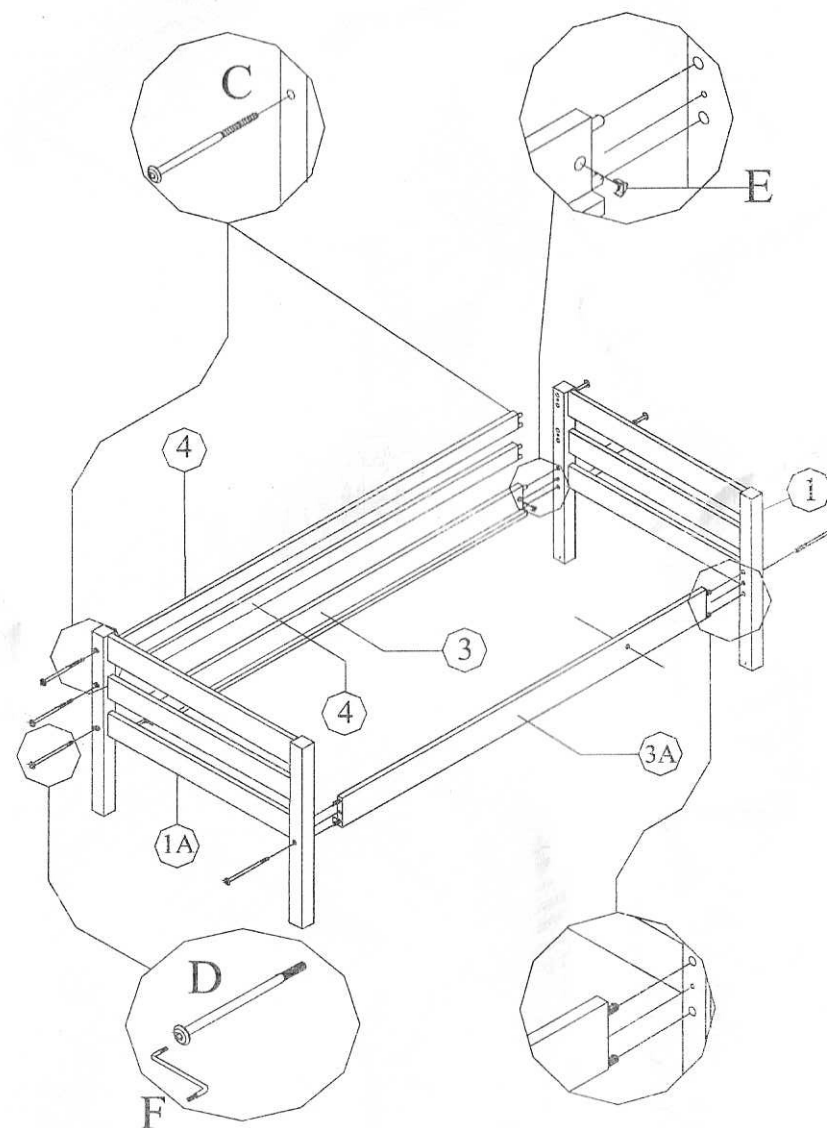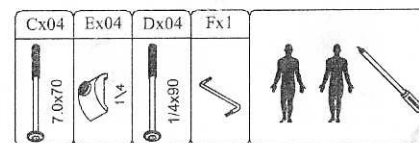



4° th
Step:

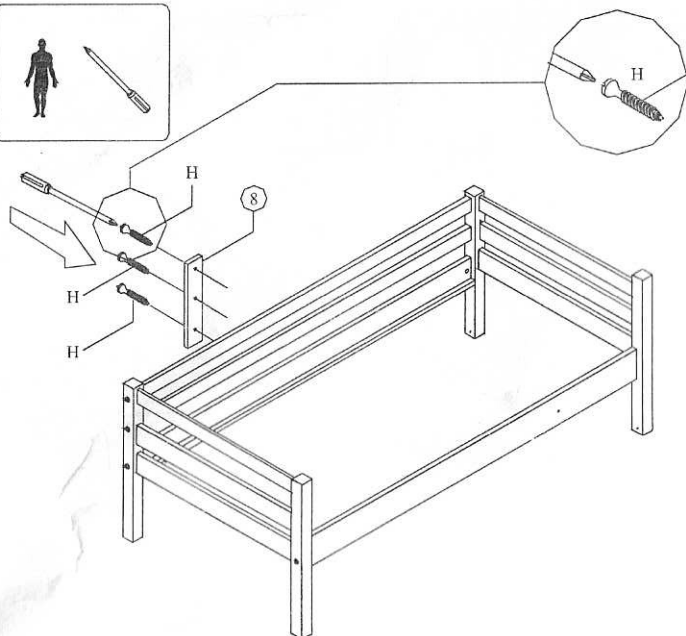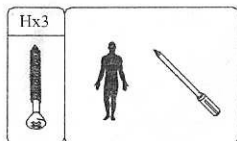



5° th
Step:

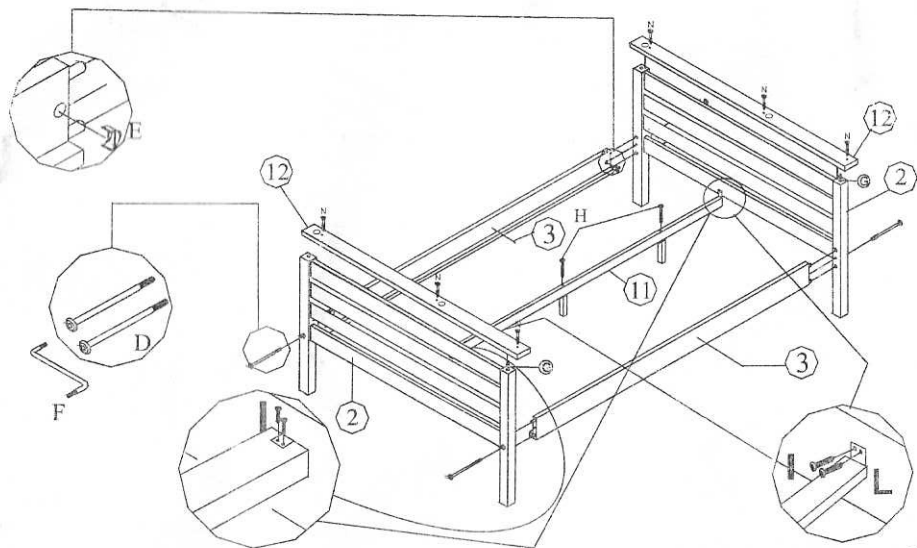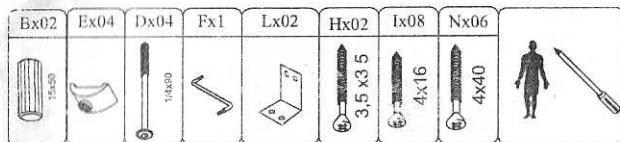








6° th
Step:

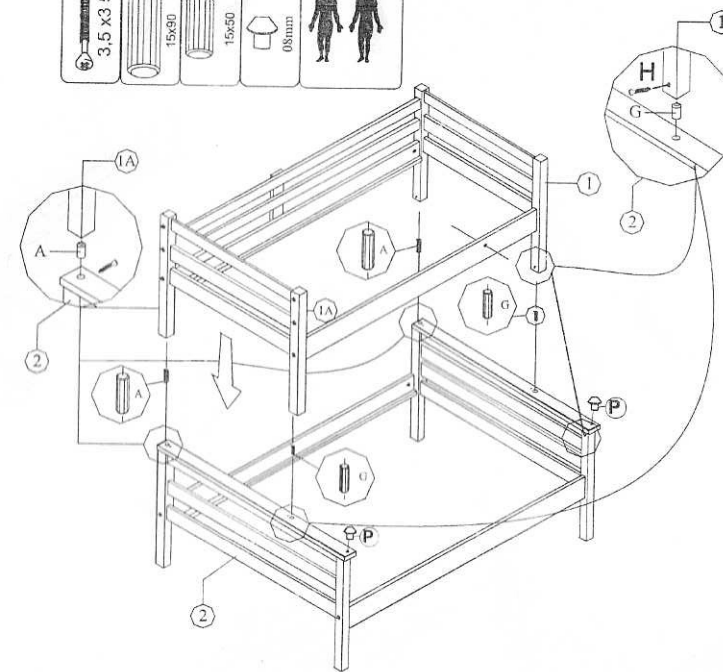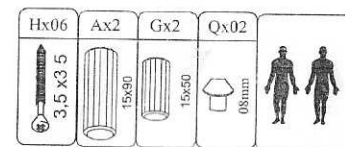

7° th
Step:

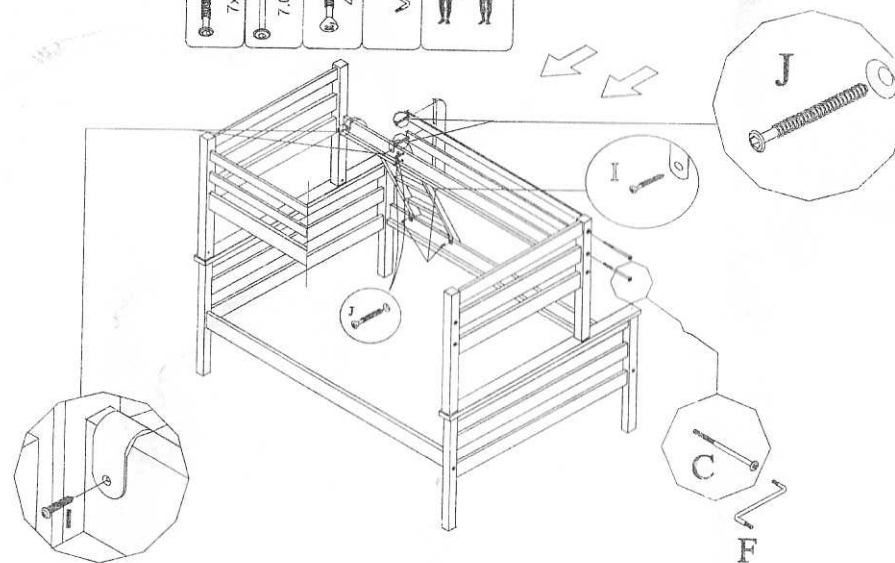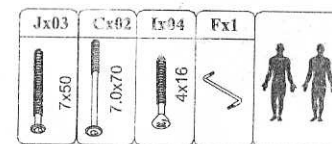

8^o th
Step:

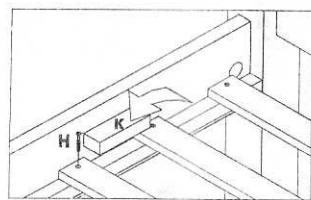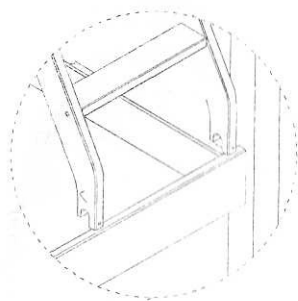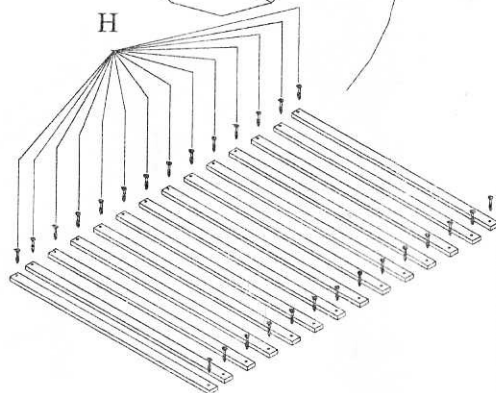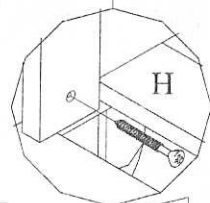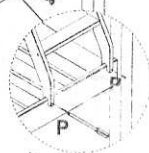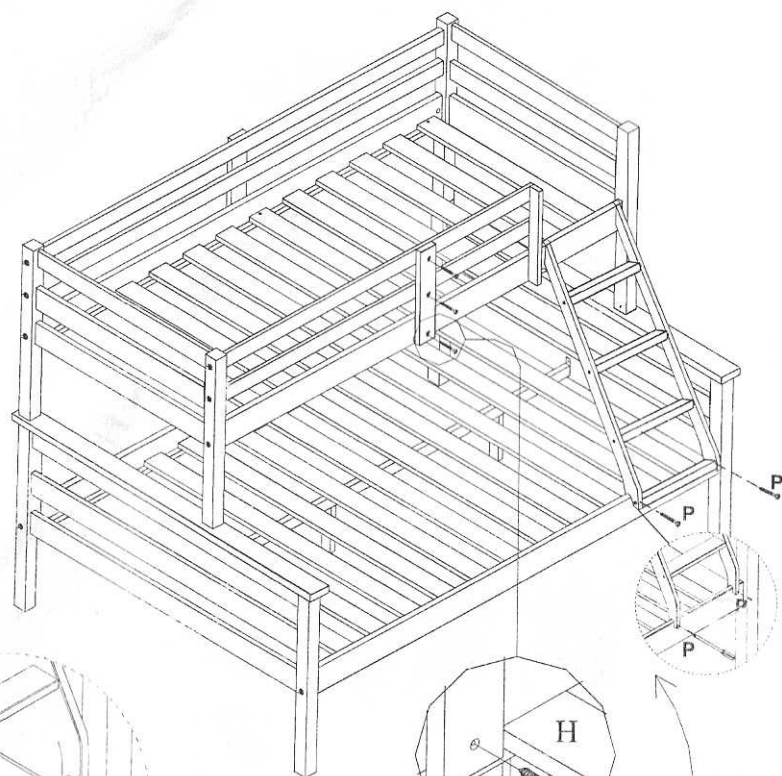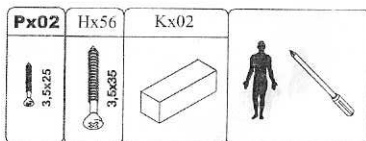

TRIO BED - 802 TWIN FULL

